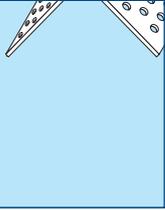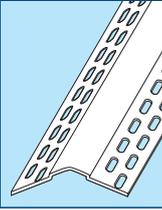# TRIM-TEX™
DRYWALL SOLUTIONS
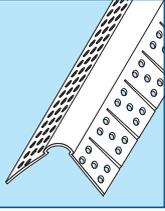
90° EXTERNAL CORNER BEADS

72-35008 10mm Bullnose (2400mm)
72-35010 10mm Bullnose (3000mm)
72-7008 19mm Bullnose (2400mm)
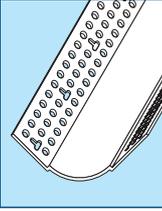**72-7010** 19mm Bullnose (3000mm)

135° EXTERNAL CORNER BEADS

72-35038 10mm Bullnose Bead (2400mm)
72-35030 10mm Bullnose Bead (3000mm)
72-7308 19mm Bullnose Bead (2400mm)
72-7310 19mm Bullnose Bead (3000mm)

90° EXTERNAL ARCHWAY BEADS

72-35028 10mm Bullnose Archway Bead (2400mm)
72-35020 10mm Bullnose Archway Bead (3000mm)
72-7110 19mm Bullnose Archway Bead (3000mm)

STANDARD 90° INTERNAL BEAD

72-7208 19mm Bullnose Bead (2400mm)
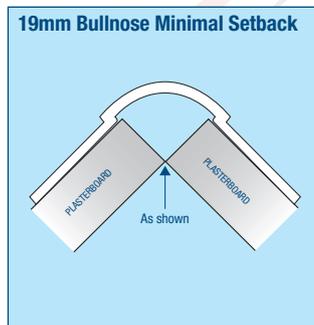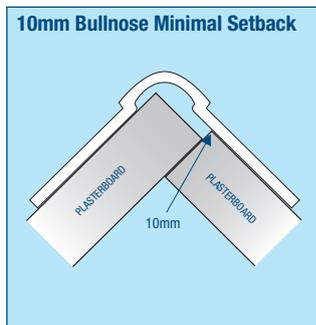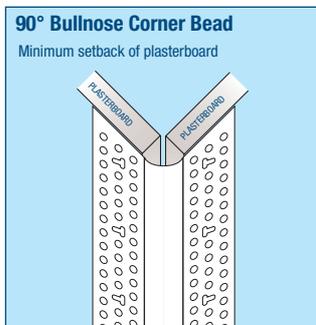**72-7210** 19mm Bullnose Bead (3000mm)

ACCESSORIES

72-0923 10mm 3 Way Adaptor
72-0924 10mm Splicer
72-0917 19mm Adaptor
72-0922 10mm Mitre Marker
72-0932 19mm Mitre Marker

INSTALLATION:

• Ensure the substrate is true and plumb
• Remove excess overhang of plasterboard prior to installation of Trim-Tex beads
• Spray a liberal coat of Trim-Tex 847 Spray Adhesive to the inside of the Trim-Tex bead as well as the surface of the plasterboard where the Trim-Tex bead is to be installed
• Apply firm even pressure to the mud legs using the Trim-Tex Cleaning Tool to ensure a solid bond
• Staple through the set leg of the Trim-Tex bead at 200mm centres maximum, using 10mm staples. When installing archway beads staple every tab for ultimate bond
• Re-apply pressure to the set leg of the Trim-Tex bead if required
• Set the Trim-Tex bead with approved compounds (refer to standard ASTM-C475-02 (2007) or the Plasterboard Manufacturers recommendations)

NOTES:

• The incorrect installation of Trim-Tex Beads will void any Warranty (see Trim-Tex Product Warranty at www.wallboardtools.com.au)
• Refer to UV Stabilized Trim-Tex beads or RenderEdge beads for external use
• On vertical installation of Trim-Tex beads allow 6mm minimum clearance above floor for structural movement

90° Bullnose Corner Bead
Minimum setback of plasterboard

10mm Bullnose Minimal Setback

19mm Bullnose Minimal Setback

Spray Adhesive 847
Spray a liberal coat of 847 to the inside of the bead as well as the surface of the plasterboard. Apply firm even pressure to ensure a solid bond.

Trim-Tex 847 Spray Adhesive is a high tack, pressure sensitive spray adhesive specifically designed to be used to install Trim-Tex Beads.

PRODUCT DATA SHEET